




» UBeTrack™ mobile storage system

UBeTrack™ is a space-saving storage system with adjustable shelves.

The structure is very light so the mobile shelves can be moved quickly. The result is a unique storage system made from anodized aluminium and high-quality, antistatic synthetic materials, which means it can be used in both sterile and non-sterile environments.

By positioning the runner system at the top good hygiene is guaranteed and it is easy to get past with transport trolleys.

The modular, space-saving UBeTrack™ storage system is a hygienic solution for small spaces with which you save up to 75% of corridor space and up to 33% of the total footprint.

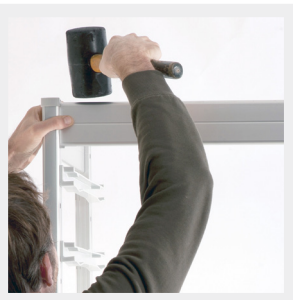

» Easy assembly

Assembly is based on the UBeFlex® concept so it is very quick. Because the runner system is positioned at the top there are no floor fixing points.


The packages containing the parts are easy to carry and fit in a standard lift.



» Modular construction

ISO D-type and DIN D-type columns can be combined with each other and with D-type shelves of up to 1200 mm. The same shelf-combinations must be fitted within one block however.

The maximum depth for working ergonomically is around 2300 mm. For example, this corresponds with 5 ISO D-type columns or 6 DIN D-type columns whether combined with shelves or not.

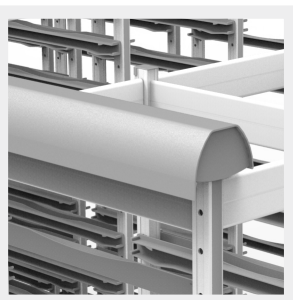

» Hygienic

The runner system, which is positioned at the top, has a protective cover to prevent dust from falling into the sections and so that the whole thing can be cleaned and disinfected easily.

Because there are no floor rails, the floor is kept clear for cleaning; and it is easy to get past with transport trolleys.



» Design

With regard appearance the design fits in seamlessly with the existing UBeFlex® range so that both can be combined beautifully in one space.



» Castors

The wheels on the mobile shelves have very low rolling resistance.

Thanks to the UBeTrack's intelligent design, the wheels also function as a bumper to prevent damage.



» Extremely strong

The UBeTrack™ has a load-bearing capacity of max. 600 kg per column. In column set-up max. 25 kg per pair of guides and in shelf set-up max. 150 kg per shelf level.


For ergonomic reasons, loading the mobile shelves over 150 kg in total is not recommended.



» Optimum labeling

The shelves can be fitted with newly designed "click" label holders. These simply click onto any position on the front of the shelf and can be fitted with an insert. Because these label holders do not protrude above the edge of the shelf, you can take larger packets or containers from the shelves without a hitch.

There are specific label holders for the columns that can also simply be clicked onto the profiles.

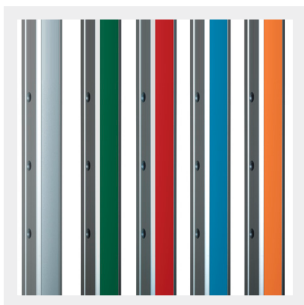

» Identification

As an option you can fit the UBeTrack™ with colored PVC strips (packs of 10) to replace the standard gray profiles to personalize your storage per department or, for example, to use color coding for location allocation per discipline in the storage within your CSA.