

UFLEX III. POSTS

Material: anodised aluminum. This is resistant to corrosion and easy to clean. The posts only weigh 5 kg each but have a capacity of 600 kg per post.

The posts are 30 x 30 mm fully closed tube profiles with a width of 2 mm. They are assembled without welding for a better resistance against corrosion.

You can gain space by placing an extra shelf on the top of the rack.

Each post has 25 positions every 68 mm making it possible to fit 25 baskets of 5 cm or 13 baskets of 10 cm. Positions that aren't being used can be optionally sealed with a cap.

The posts are connected by 4 profiles. These 'spacers' make for a solid rack, even if only one column is placed.

The front is equipped with a 'bumper', which has a double function:

- protection against 'picking-trolleys'
- placement of identification

The total height of the posts is 2000 mm. The posts are equipped with plastic adjustable feet.


UFLEX III. GUIDES

Belintra uses runners that can be fixed onto the posts, a click-in runner is optional. The fixed runners are always more stable than the loose ones, especially in the end pieces where the most pressure is. You can easily change the position of the runners, all you have to do is screw out the 'turnpin'.

Belintra chooses plastic runners, because these go well with our plastic baskets and the baskets make no noise when sliding in and out.

The runners have a U- and L-profile. The U-profile is used to place baskets, Volkern shelves and wire baskets. The L-profile is used for stackable baskets and the blue baskets from the pharmacie.

The runners are equipped with a built-in stop for the modular baskets.

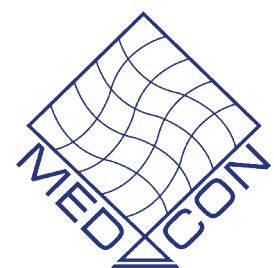

Solutions for Bio-Security

Med-Con Pty Ltd
Solutions for Bio-Security

Phone: 03 9753 2710
Toll Free: 1800 001 435
Fax: 03 9753 2722

Website: www.medcon.com.au

BELINTRA

T. +32 (9) 243 10 10
F. +32 (9) 243 10 19
info@belintra.be
www.mexiz.com

MEXIZ
WWW.MEXIZ.COM

By

BELINTRA



ISO

SHELVES



Sterile room with ISO D-type



UFLEX III. OPTIMAL UTILISATION OF SPACE

The UFlex II modular rack is an integrated storage system for Euronorm baskets and trays (60 x 40 cm), DIN baskets (60 x 30 cm) and shelves.

The rack consists of posts with a height of 2m. The posts have plastic adjustable feet and are connected with 4 connecting elements (spacers). The frame is made out of aluminum. The posts have 25 position for the guides. You can choose the distance between the guides (in steps of 68mm). The load is 600kg per post.

Each column consists of 2 posts which are connected by 4 spacers (= 1 set).

Columns of the same depth can be endlessly combined. It is possible to place multiple columns with baskets, and combine those columns with shelves,...
The UFlex system is suitable for the CSA, OK, pharmacy, storage rooms and many more.

The UFlex III system stands for quality, flexibility and durability.

UFLEX III. POSSIBLE COMPLETION FOR ALL DEPARTMENTS




Stainless steel wire shelves



Fine mesh trays



PC baskets

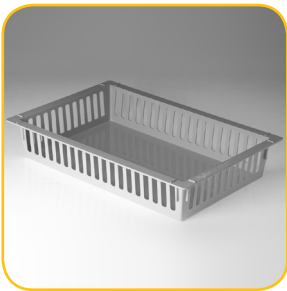

ABS baskets



Stainless steel wire baskets



Stainless steel instrument baskets